

Body/Exterior Inspection/Service

- Inspect roof condition.
- Check sealant integrity around vents, TV antenna, satellite dish and all other accessories.
- Check sealant and caulking integrity at all seams.
- Look for cracks or tears that can lead to water intrusion.
- Inspect window frames for signs of leakage; clean weep holes.
- Inspect caulking around clearance lights and taillights.
- Inspect caulking around compartment doors and other accessories.
- Check security of compartment-door latches.
- Check condition of patio-awning hardware; clean and lubricate as needed.
- Check condition of window-awning hardware; clean and lubricate as needed.
- Check slideout-topper tension.
- Check condition of slide-topper material.
- Extend all awnings and check fabric integrity; clean if necessary.
- Lubricate entry- and baggage-door locks (silicone-based dry lube).
- Clean and lubricate entry-door step (silicone-based dry lube).
- Clean and treat EPDM, TPO or PVC roof with protectant.
- Clean and check integrity of roof-vent lids and covers.
- Check integrity of rear or side ladder hardware and seals.
- Wash and wax the exterior.

From the experts at:

TRAILER
FOLLOW THE ROAD TO ADVENTURE **LIFE**